

Model 100

**Oil type**

Hydraulic oil

refer to „Specifications for Service Products“ page 342

---

**Capacity**

total (ltr)

1.6–1.8

---

- Check oil level in the reservoir **with the engine running**.
- If necessary top up to maximum level with the engine running.

**Attention!** For this purpose, all hydraulically operated parts such as windows and sliding roof **must be closed** and the seat adjustment must be in the **reclining position**, as otherwise it is possible that the reservoir will overflow during subsequent operation.